



ORIGINAL	SUPERIOR
	POWER
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	/ SOURCE
-/--	-/--
OSD/DISPLAY	
SHOW VIEW	
TV/TEXT	
ON+	VOL+
ON -	VOL -
PROG. CHECK UP	P+
PROG. CHECK DOWN	P -
DATE+	UP
DATE -	DOWN
OFF+	LEFT
OFF -	RIGHT
OK	OK
REPLAY	BACK
/ TIMER	SLEEP
LIBRARY / SEARCH	INFO
SP/LP/EP	EPG
STILL ALBUM	FAV
PAUSE/PLAY	/ SMART TUBE

ORIGINAL	SUPERIOR
STOP	/ SMART VIDEO
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
I - TIMER	SHIFT+POWER
AUDIO	SHIFT+MUTE
CANCEL	SHIFT+EXIT
AV LINK	SHIFT+
PROG/CHECK	SHIFT+0
TRACK. / V - LOCK UP	SHIFT+UP
TRACK. / V - LOCK DOWN	SHIFT+DOWN
INDEX / SKIP PREV	SHIFT+LEFT
INDEX / SKIP NEXT	SHIFT+RIGHT
RESET	SHIFT+BACK
DIRECT TV REC	SHIFT+RED

