



ORIGINAL	SUPERIOR
	POWER
AUDIO	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	/ AV
-/--	-/--
OSD / DISPLAY	
PDC	
TV / TEXT	
VOL+	VOL+
VOL-	VOL-
TRK / V-LOCK / CH+	P+
TRK / V-LOCK / CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RESET / CANCEL	BACK
/ TIMER	SLEEP
SP / LP / EP	TV/DTV
PROG PLAY	FAV
TV ASPECT	

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
EXT LINK	SHIFT+EXIT
DATE +/-	SHIFT+ 1 / 4
ON +/-	SHIFT+ 2 / 5
OFF +/-	SHIFT+ 3 / 6
INPUT SELECT	SHIFT+ / AV
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P-
CH+	SHIFT+UP
CH-	SHIFT+DOWN
OFF TIMER	SHIFT+SLEEP
PAUSE / STEP	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

