



ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
DISC	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
+10	-/--
DISPLAY	
H BASS	
TREBLE	
SURROUND	
VOL+	VOL+
VOL -	VOL -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
DEL	BACK
SLEEP	SLEEP
PLAY MODE	TV/DTV
DIMMER	INFO
PROGRAM	EPG
 / PLAY TIMER	FAV
RE – MASTER	 / NET TV

[illegible]