



ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
MENU / PLAY LIST	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FUNCTIONS	/ AV
-/-- / > = 10	-/--
FL DISPLAY / SLEEP	
C. FOCUS	
SW. LEVEL	
PL / S. SRD	
VOLUME+	VOL+
VOLUME-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN / SETUP	BACK
QUICK OSD	SLEEP
TEST	TV/DTV
CH. SELECT / PLAY MODE	INFO

ORIGINAL	SUPERIOR
EQ	EPG
DIR. NAV. / TOP MENU	FAV
PAUSE	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
DVD	SHIFT+1
EXT IN	SHIFT+2
FM	SHIFT+3

