



ORIGINAL	SUPERIOR
DVD	POWER
FUNCTION MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	/ SOURCE
DRIVE SELECT	-/--
DISPLAY	
PROG / CHECK	
SHOW VIEW	
/ STTL	
CH/PAGE UP	P+
CH/PAGE DOWN	P -
UP	UP
DOWN	DOWN
LEFT / STEP BACK	LEFT
RIGHT / STEP FWD	RIGHT
OK	OK
RETURN	BACK
TIME SLIP	SLEEP
DIRECT TV REC	TV/DTV
i / STATUS	INFO
GUIDE	EPG
RED	RED
GREEN	GREEN

ORIGINAL	SUPERIOR
YELLOW / CREATE CH.	YELLOW
BLUE / MANUAL SKIP	BLUE
AUDIO	SHIFT+MUTE
DIRECT NAVIGATOR	SHIFT+MENU
* / DELETE	SHIFT+EXIT
EXT LINK	SHIFT+ -/--
OPTION	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REC MODE	SHIFT+FAV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
SLOW/SEARCH REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
SLOW/SEARCH FWD	SHIFT+BLUE
TV	
	SHIFT+POWER
AV	SHIFT+
CH+	SHIFT+UP
CH -	SHIFT+DOWN
VOL-	SHIFT+LEFT
VOL+	SHIFT+RIGHT

