



ORIGINAL	SUPERIOR
	POWER
FUNCTION MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	/ AV
PROG / CHECK	-/--
G - CODE	
DELETE / *	
OPTIONS	
DRIVE SELECT	
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ RETURN	BACK
TIME SLIP	SLEEP
ANALOGUE CH	TV/DTV
i / STATUS	INFO
GUIDE	EPG
DIRECT NAVIGATOR	FAV
REC MODE	

ORIGINAL	SUPERIOR
PAUSE	
STOP	
REC	RED
SLOW / SEARCH REW	GREEN
PLAY / x13	YELLOW
SLOW / SEARCH FWD	BLUE
CH / PAGE+	SHIFT+UP
CH / PAGE -	SHIFT+DOWN
RED / AUDIO	SHIFT+RED
GREEN / DISPLAY	SHIFT+GREEN
YELLOW / CREATE CHAP	SHIFT+YELLOW
BLUE / MANUAL SKIP	SHIFT+BLUE
TV	
TV POWER	SHIFT+POWER
AV	SHIFT+ / AV
VOL+	SHIFT+ VOL+
VOL -	SHIFT+ VOL -
CH+	SHIFT+ P+
CH -	SHIFT+ P -

