



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU / PLAYLIST	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FUNCTIONS	 / AV
CH. SELECT	-/--
START	
SETUP	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV.	P -
UP	UP
DOWN	DOWN
LEFT / STEP BACK	LEFT
RIGHT / STEP FWD	RIGHT
OK	OK
RETURN	BACK
SLEEP / FL DISPLAY	SLEEP
W. SRD.	INFO
SURROUND	EPG
PLAY MODE	FAV
PAUSE	

[illegible]