



ORIGINAL	SUPERIOR
	POWER
FUNCTION MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	/ SOURCE
CHAPTER	-/--
DISPLAY	
PROG/CHECK	
OPTION	
/ TEXT	
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ RETURN	BACK
TIME SLIP	SLEEP
EXT LINK	TV/DTV
i / STATUS	INFO
GUIDE	EPG
DIRECT NAVIGATOR	FAV
PAUSE	

ORIGINAL	SUPERIOR
STOP	/ SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
DRIVE SELECT	SHIFT+MENU
DELETE	SHFIT+EXIT
/ STTL	SHIFT+
CH/PAGE+	SHIFT+ P+
CH/PAGE -	SHIFT+ P -
DIRECT TV REC	SHFIT+TV/DTV
REC MODE	SHIFT+FAV
RED	SHIFT+RED
GREEN	SHIFT+GREEN
YELLOW / -10s	SHFIT+YELLOW
BLUE / +60s	SHFIT+BLUE

