



ORIGINAL	SUPERIOR
VCR	POWER
AUDIO OUT	MUTE
MENU	MENU
RESET	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV / INPUT SELECT	AV
-/--	-/--
DISPLAY	
CHECK	
SHOW VIEW	
PDC / VPS	
DATE+	VOL+
DATE-	VOL-
UP	P+
DOWN	P-
ON+	UP
ON-	DOWN
OFF-	LEFT
OFF+	RIGHT
CANCEL	BACK
TIMER REC.	SLEEP
AV LINK	TV/DTV
STORE	EPG
SP / LP	FAV

ORIGINAL	SUPERIOR
PAUSE / SLOW	
STOP / DOWN	
REC / OTR.	RED
REW / LEFT	GREEN
PLAY / UP	YELLOW
FWD / RIGHT	BLUE
OSD	SHIFT+
TRACK./V-LOCK DOWN	SHIFT+DOWN
TRACKING/V-LOCK UP	SHIFT+UP
INDEX/SKIP PREV.	SHIFT+GREEN
INDEX/SKIP NEXT	SHIFT+BLUE
TV	
TV	SHIFT+POWER
1/2/3/4/5	SHIFT+ 1/2/3/4/5
6/7/8/9/0	SHIFT+ 6/7/8/9/0
-/--	SHIFT+ -/--
VOL-	SHIFT+ VOL-
VOL+	SHIFT+ VOL+
ON-	SHIFT+ P-
ON+	SHIFT+ P+
AV LINK	SHIFT+ TV/DTV

