



ORIGINAL	SUPERIOR
	POWER
AUDIO	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV / INPUT SELECT	/ SOURCE
-/--	-/--
OSD / DISPLAY	
VIDEO PLUS+	
REPLAY	
TV / TEXT	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RESET	BACK
/ TIMER REC	SLEEP
SP / LP	TV/DTV
PDC	INFO

ORIGINAL	SUPERIOR
PROG. CHECK	EPG
DIREC TV REC	FAV
TV ASPECT	/ NET TV
PAUSE	
STOP	/ SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
SEARCH	SHIFT+EXIT
	SHIFT+5
	SHIFT+8
DATE+	SHIFT+ VOL+
DATE -	SHIFT+ VOL -
TRACKING / V-LOCK+	SHIFT+ P+
TRACKING / V-LOCK -	SHIFT+ P -
ON+	SHIFT+UP
ON -	SHIFT+DOWN
OFF -	SHIFT+LEFT
OFF+	SHIFT+RIGHT
CANCEL	SHIFT+BACK
RED	SHIFT+RED
GREEN	SHIFT+GREEN
YELLOW	SHIFT+YELLOW
BLUE	SHIFT+BLUE

