



ORIGINAL	SUPERIOR
	POWER
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	/ SOURCE
-/--	-/--
OSD/DISPLAY	
SV/V+	
TV/TEXT	
ON+	VOL+
ON -	VOL -
PROG. CHECK UP	P+
PROG. CHECK DOWN	P -
DATE+	UP
DATE -	DOWN
OFF+	LEFT
OFF -	RIGHT
OK	OK
---	BACK
/ TIMER	SLEEP
---	INFO
SP/LP/EP	EPG
---	FAV
PAUSE/PLAY	/ SMART TUBE

ORIGINAL	SUPERIOR
STOP	/ SMART VIDEO
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
---	SHIFT+POWER
---	SHIFT+MUTE
---	SHIFT+EXIT
TV ASPECT	SHIFT+
PROG/CHECK	SHIFT+0
TRACK. / V - LOCK UP	SHIFT+UP
TRACK. / V - LOCK DOWN	SHIFT+DOWN
INDEX/SKIP PREV	SHIFT+LEFT
INDEX/SKIP NEXT	SHIFT+RIGHT
---	SHIFT+BACK
DIRECT TV REC	SHIFT+RED

