

ORIGINAL	SUPERIOR	ORIGINAL	SUPEROR	ORIGINAL	SUPEIRO
POWER	POWER	LIBRARY	EPG	RETURN	SHIFT+BAC
MUTE	MUTE	ACTION	FAV	TV VIDEO	SHIFT+TV/D
MENU	MENU	CLEAR	▲ / NET TV	INDEX: RIGHT	SHIFT+INF
EXIT	EXIT	ENTER	■ / SMART	PROGRAM	SHIFT+EP
1/2/3/4/5	1/2/3/4/5	TIMER RECORD	RED	SAP	SHIFT+FA'
6/7/8/9/0	6/7/8/9/0	SLOW	GREEN	EJECT	SHIFT+
INPUT NEXT	📺 / SOURCE	TAPE POSITION	YELLOW	PAUSE	SHIFT+
>100	-/--	SPEED TOGGLE	BLUE	STOP	SHIFT+
DISPLAY	📺	AUDIO	SHIFT+MUTE	REC	SHIFT+RE
ZOOM	🔍	CANCEL	SHIFT+EXIT	REW	SHIFT+GRE
ANGLE	📺	TRACKING DOWN	SHIFT+1	PLAY	SHIFT+YELL
SUBTITLE	📺	TRACKING UP	SHIFT+2	FWD	SHIFT+BLU
VOL+	VOL+	ADD DIT.	SHIFT+4		
VOL -	VOL -	PDC	SHIFT+5		
CH+	P+	SET	SHIFT+6		
CH -	P -	VCR+	SHIFT+ 📺		
UP	UP	SEARCH	SHIFT+ -/--		
DOWN	DOWN	DISPLAY TOGGLE	SHIFT+ 📺		
LEFT	LEFT	SELECT+	SHIFT+UP		
RIGHT	RIGHT	SELECT -	SHIFT+DOEN		
OK	OK	COUNTER RESET	SHIFT+LEFT		
BACK	BACK	COMMERCIAL ADV.	SHIFT+RIGHT		
I – TIMER	SLEEP	OK 2	SHIFT+OK		
DVD/TV	TV/DTV	SKIP NEXT	SHIFT+ P+		
INDEX: LEFT	INFO	SKIP PREV	SHIFT+ P -		

