

ORIGINAL	REPLACEMENT
POWER	POWER
DVD AUDIO	MUTE
DVD MENU	MENU
DVD CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	AV
DVD +10	-/--
DVD STATUS	
PICTURE MODE	
SETUP	
PLAY MODE	
DVD SKIP NEXT	VOL+
DVD SKIP PREV	VOL-
CH+	P+
CH-	P-
DVD UP	UP
DVD DOWN	DOWN
DVD LEFT	LEFT
DVD RIGHT	RIGHT
DVD SELECT	OK
DVD RETURN	BACK
TIMER	SLEEP
INPUT DVD	TV/DTV
INFO	INFO

ORIGINAL	REPLACEMENT
GROUP	FAV
JET REW	
DVD TOP MENU	EPG
DVD RAM DUBBING	RED
DVD REW	GREEN
DVD PLAY	YELLOW
DVD FWD	BLUE
DVD PAUSE	
DVD STOP	
ITIMER	SHIFT+POWER
VCR 1/2/3/4/5	SHIFT+1/2/3/4/5
VCR 6/7/8/9/0	SHIFT+6/7/8/9/0
VCR AUDIO	SHIFT+MUTE
VCR CANCEL	SHIFT+EXIT
VCR MENU	SHIFT+MENU
VCR +10	SHIFT+/-/--
AV ENHANCER	SHIFT+AV
VCR STATUS	SHIFT+ 
OUTPUT	SHIFT+ 
POSITION MEM.	SHIFT+ 
VCR UP/DOWN	SHIFT+UP/DOWN
VCR LEFT/RIGHT	SHIFT+LEFT/RIGHT
VCR SELECT	SHIFT+OK
QUICK REPLAY	SHIFT+BACK
INPUT VCR	SHIFT+TV/DTV

[illegible]