



ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
TUNE MODE	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SELECTOR	 / SOURCE
>10	-/--
DISPLAY	
 PLAY/REC	
CLOCK/TIMER	
PLAY MODE	
VOLUME+	VOL+
VOLUME -	VOL -
FWD/SKIP NEXT	P+
REW/SKIP PREV	P -
BASS+	UP
BASS -	DOWN
TREBLE -	LEFT
TREBLE+	RIGHT
REV MODE	BACK
SLEEP	SLEEP
TUNER	TV/DTV
DIMMER	INFO
PROGRAM	EPG

[illegible]