



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
DIRECT NAVI./TOP MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
VUERA CAST	/ SOURCE
#	-/--
DISPLAY/SLEEP	
SURROUND	
SUB MENU/S	
CH. SELECT/SOUND	
VOL+	VOL+
VOL -	VOL -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ RETURN	BACK
START	INFO
STATUS	EPG
POP – UP MENU	FAV
RED	RED
GREEN	GREEN

ORIGINAL	SUPERIOR
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
CANCEL / *	SHIFT+EXIT
BD/SD	SHIFT+1
iPod	SHIFT+2
RADIO/EXT – IN	SHIFT+3
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAUSE	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

