



ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT DVD	/ SOURCE
CHANNEL SELECT	-/--
DISPLAY	
CENTER FOCUS	
DOWNMIX	
SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER / SET	OK
RETURN	BACK
TIMER	SLEEP
INPUT TV	TV/DTV
SUPER SURROUND	INFO

ORIGINAL	SUPERIOR
OSD	EPG
BAND	FAV
SUBWOOFER	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
TOP MENU	SHIFT+MENU
INPUT VCR	SHIFT+
FMMODE	SHIFT+ -/--
POSITION MEMORY	SHIFT+
PROLOGIC	SHIFT+
SETUP	SHIFT+
ENTER	SHIFT+OK
REPEAT	SHIFT+BACK
REPEAT A – B	SHIFT+SLEEP
TEST	SHIFT+INFO
SOUND FIELD CONTR.	SHIFT+EPG
PLAY MODE	SHIFT+YELLOW

