



ORIGINAL	SUPERIOR
	POWER
A.ONLY	MUTE
MENU	MENU
QUICK REPLAY	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FUNCTIONS	/ SOURCE
+10	-/--
DISPLAY	
RE – MASTER	
ANGLE / PAGE	
GROUP	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETUNR	BACK
SLEEP	SLEEP
SURROUND	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
PGM	EPG
TOP MENU	FAV
SUB WOOFER	/ NET TV
PAUSE	
STOP	/ SMART
REC	RED
REW	GREEN
DVD/CD PLAY	YELLOW
FWD	BLUE
AUTO OFF	SHIFT+POWER
TAPE	SHIFT+1
TUNER / AUX	SHIFT+2
H.BASS	SHIFT+
PLAY/REC TIMER	SHIFT+
PLAY MODE	SHIFT+
SOUND	SHIFT+
REPEAT	SHIFT+BACK
CLOCK / TIMER	SHFIT+SLEEP
CM – SKIP	SHIFT+TV/DTV
DIMMER	SHIFT+INFO
ALL DISC	SHIFT+EPG
DISC	SHIFT+FAV

