



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT CD	/ SOURCE
+10	-/--
SFC	
LEVEL	
SUBWOOFER	
MULTIREAR	
VOL+	VOL+
VOL -	VOL -
DEFAULT NEXT	P+
DEFAULT PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
SURROUND	BACK
ENHANCED SURROUND	SLEEP
TV	TV/DTV
EFFECT DOWN	INFO
TEST	EPG

ORIGINAL	SUPERIOR
BANDA	FAV
DIMMER	RED
DIRECT TUNE	GREEN
EFFECT UP	BLUE
OFF	SHIFT+POWER
ON	SHIFT+MENU
VCR	SHIFT+1
TAPE	SHIFT+2
AUX	SHIFT+3
PHONO	SHIFT+4
VDP	SHIFT+5
VCR 2	SHIFT+6
TAPE 2	SHIFT+7
INPUT 6CH	SHIFT+8
CD – R/RW	SHIFT+9
DIGITAL	SHIFT+0
DVD	SHIFT+
STEREO	SHIFT+
DOLBY II	SHIFT+
DTS	SHIFT+
EFFECT	SHIFT+
VOL REAR +/-	SHIFT+UP/DOWN
VEL CENTER-/+	SHIFT+LEFT/RIGHT
MODE	SHIFT+INFO
SURROUND ON	SHIFT+EPG

