



ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
MENU / PLAY LIST	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV	/ AV
-/-- / > = 10	-/--
FL DISPLAY	
ZOOM	
MIX 2 CH.	
SUBTITLE	
VOL+ / VOL-	VOL+ / VOL-
SKIP NEXT / PREV.	P+ / P-
UP / DOWN	UP / DOWN
LEFT / RIGHT	LEFT / RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
MANUAL SKIP	TV/DTV
CH. SELECT	INFO
ADVANCED DISC REVIEW	EPG
TOP MENU	FAV
PAUSE / SLOW SEARCH	
STOP	

ORIGINAL	SUPERIOR
REW / SLOW SEARCH	GREEN
PLAY	YELLOW
FWD / SLOW SEARCH	BLUE
AV SYSTEM	SHIFT+POWER
AUDIO	SHIFT+MUTE
SFC	SHIFT+MENU
TEST	SHIFT+EXIT
TV/AV / AUX	SHIFT+1 / 2
TUNER BAND / DVD/CD	SHIFT+3 / 4
FUNCTIONS	SHIFT+ / AV
SUBWOOFER LEVEL	SHIFT+ -/--
C. FOCUS	SHIFT+
H. BASS	SHIFT+
SETUP	SHIFT+
SUPER SRND	SHIFT+
CH+ / CH-	SHIFT+ P+/P-
PLAY SPEED	SHIFT+UP
PLAY MODE	SHIFT+DOWN
REPEAT	SHIFT+BACK
QUICK REPLAY	SHIFT+SLEEP
QUICK OSD	SHIFT+TV/DTV
GROUP	SHIFT+INFO
ANGLE / PAGE	SHIFT+EPG
DOLBY / PL II	SHIFT+FAV

