



ORIGINAL	SUPERIOR
POWER	POWER
MUTING	MUTE
MENU / PLAYLIST	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD / CD	/ SOURCE
≥10	-/--
FL DISPLAY	
ZOOM	
FUNCTIONS	
SUBTITLE	
VOLUME -/+	VOL -/+
SKIP NEXT/CH+	P+
SKIP PREV/CH -	P -
DOWN / UP	DOWN / UP
LEFT / RIGHT	LEFT / RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
TV / VCR	TV/DTV
SUBWOOFER LEVEL	INFO
ADVAN. DISC REVIEW	EPG
DOLBY PL. II	FAV
PAUSE	

ORIGINAL	SUPERIOR
STOP	/ SMART
SLOW/SEARCH REW	GREEN
PLAY	YELLOW
SLOW/SEARCH FWD	BLUE
AUDIO	SHIFT+MUTE
TOP MENU / DIR. NAV.	SHIFT+MENU
CH. SELECT	SHIFT+ -/--
QUICK OSD	SHIFT+
GROUP	SHIFT+
SETUP	SHIFT+
TEST	SHIFT+
QUICK REPLAY	SHIFT+LEFT
MANUAL SKIP	SHIFT+RIGHT
REPEAT	SHIFT+BACK
ANGLE / PAGE	SHIFT+EPG
PROGRESSIVE	SHIFT+FAV
PLAY MODE	SHIFT+YELLOW
PLAY SPEED	SHIFT+BLUE
TV	
TV POWER	SHIFT+POWER
TV / AV	SHIFT+
TV VOL +/-	SHIFT+ VOL +/-
TV CH +/-	SHIFT+ P +/-

