



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
HOME	MENU
X / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT – AV	/ SOURCE
/ ASPECT	
OPTION	
/ TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK / RETURN	BACK
INPUT – TV	TV/DTV
i	INFO
GUIDE	EPG
APPS	/ SMART VIDEO
RED	RED

ORIGINAL	SUPERIOR
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
MENU	SHIFT+MENU
3D	SHIFT+3
/ STTL	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
/ LAST VIEW	SHIFT+BACK
? / e HELP	SHIFT+INFO
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

