



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT – AV	/ SOURCE
SD HC	-/--
VIERA TOOLS	
/ HOLD	
OPTION	
/ TEXT	
VOL+	VOL+
VOL -	VOL -
	P+
	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK / RETURN	BACK
INPUT – TV	TV/DTV
i	INFO
GUIDE	EPG

ORIGINAL	SUPERIOR
VIERA LINK	FAV
/ ASPECT	/ NET TV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
N	SHIFT+EXIT
/ STTL.	SHIFT+
DIRECT TV REC	SHIFT+ TV/DTV
/ INDEX	SHIFT+INFO
DVD	
	SHIFT+POWER
PROGRAMME	SHIFT+ P -
PROGRAMME	SHIFT+ P+
PAUSE /	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW / SKIP PREV	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD / SKIP NEXT	SHIFT+BLUE

