



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT AV	/ AV
VIERA TOOLS	-/--
VIERA CAST	
/ HOLD	
OPTION	
/ TEXT	
VOL+	VOL+
VOL-	VOL-
	P+
	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ RETURN / BACK	BACK
/ OFF TIMER	SLEEP
INPUT TV	TV/DTV
i	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
VIERA LINK	FAV
/ ASPECT	
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
3D	SHIFT+3
APPS	SHIFT+8
SD CARD	SHIFT+ / AV
/ SURROUND	SHIFT+
/ STTL	SHIFT+
PROGRAMME	SHIFT+UP
PROGRAMME	SHIFT+DOWN
/ LAST VIEW	SHIFT+BACK
N	SHIFT+SLEEP
/ INDEX	SHIFT+INFO
DIRECT TV REC	SHIFT+FAV
PAUSE / STEP	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW / SKIP PREV.	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD / SKIP NEXT	SHIFT+BLUE

