



ORIGINAL	SUPERIOR
POWER	POWER
AUDIO OUT	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	 / SOURCE
-/--	-/--
DISPLAY	
ZERO STOP	
OSD	
VIDEO PLUS+	
TRACKING / V-LOCK+	VOL+
TRACKING / V-LOCK -	VOL -
SKIP / INDEX NEXT	P+
SKIP / INDEX PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
RESET	BACK
SLOW	SLEEP
CHECK	INFO
RECORDING SP LP	EPG
TIMER REC	FAV

ORIGINAL	SUPERIOR
PAUSE/STILL	 / SMART TUBE
STOP	 / SMART VIDEO
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
⤴ / ⤵	SHIFT+1/7
⤴ / ⤵	SHIFT+3/9
---	SHIFT+0
ON+	SHIFT+UP
ON -	SHIFT+DOWN
OFF -	SHIFT+LEFT
OFF+	SHIFT+RIGHT
STORE	SHIFT+OK
DATE -	SHIFT+GREEN
DATE+	SHIFT+BLUE
TV	
TV POWER	SHIFT+POWER
TV/AV	SHIFT+ 
VOLUME+	SHIFT+ VOL+
VOLUME -	SHIFT+ VOL -
⤴	SHIFT+ P+
⤵	SHIFT+ P -

