



ORIGINAL	SUPERIOR
	POWER
TV MUTE	MUTE
SETUP	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USB	 / AV
DISC	-/--
ZOOM	
ANGLE	
SUBTITLE	
TV VOL+	VOL+
TV VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TIMER	SLEEP
INFO	INFO
SHUFFLE	EPG
TIME SEARCH	FAV

[illegible]