



ORIGINAL	SUPERIOR
	POWER
AUDIO	MUTE
DISC MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
EDIT	-/--
DISPLAY	
REC MODE	
SETUP	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
 / BACK	BACK
TIMER	SLEEP
TV/VIDEO	TV/DTV
SHOWVIEW	INFO
TOOLS	EPG
DIRECT/DUBBING	FAV

[illegible]