



ORIGINAL	SUPERIOR
	POWER
AUDIO	MUTE
DISC MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	AV
USB	-/--
ZOOM	
OPTIONS	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
 / BACK	BACK
TIMER	SLEEP
INFO	INFO
REC. MODE	FAV
EJECT	
PAUSE	
STOP	

[illegible]