



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU / BROWSE	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ INPUT	/ SOURCE
12	-/--
AMBILIGHT	
OPTION	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / LIST	OK
i+	INFO
/ GUIDE	EPG
MODE	FAV
RED / DEMO	RED
GREEN	GREEN

ORIGINAL	SUPERIOR
YELLOW	YELLOW
BLUE	BLUE
	SHIFT+
P ↔ P	SHIFT+BACK
STOP / MHEG/CANCEL	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE
HTS	
	SHIFT+MUTE
VOL+	SHIFT+ VOL+
VOL -	SHIFT+ VOL -

