



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
DIGITAL MENU	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ AV	/ SOURCE
/ SMART	
/	
VOL+	VOL+
VOL-	VOL-
P+	P+
P-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK / P<P	BACK
A / D	TV/DTV
i+	INFO
/ EPG	EPG
	FAV

ORIGINAL	SUPERIOR
WHITE / OPTION	/ SMART TUBE
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
I-II	SHIFT+MUTE
TV MENU	SHIFT+MENU
	SHIFT+ -/--
/ SMART	SHIFT+
TV/RADIO / DVB	SHIFT+TV/DTV

