



ORIGINAL	SUPERIOR
	POWER
	MUTE
EXIT	EXIT
	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	-/--
	
TELETEXT	
+	VOL+
-	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
	EPG
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE

[illegible]