



ORIGINAL	SUPERIOR
	POWER
	MUTE
TV MENU	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ AV	/ AV
/ ACTIVE CONTROL	-/--
/ SMART	
/	
OPTIONS	
VOL+	VOL+
VOL-	VOL-
P(age)+	P+
P(age) -	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK / P<P	BACK
	SLEEP
TV/RADIO / DVB	TV/DTV
i+	INFO

ORIGINAL	SUPERIOR
/ PHOTO VIEWER	EPG
	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
/ I/II	SHIFT+MUTE
DIG. TV MENU / PHOTO	SHIFT+MENU
/ SMART	SHIFT+
A / D	SHIFT+
	SHIFT+
	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P-
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
PLAY	SHIFT+YELLOW

