



ORIGINAL	SUPERIOR
	POWER
	MUTE
	MENU
EXIT / TV	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
 / SOURCE	 / SOURCE
 / LIST	-/--
 / FORMAT	
	
TEXT	
 +	VOL+
 -	VOL -
 +	P+
 -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
 BACK	BACK
USB	TV/DTV
INFO	INFO
 / TV GUIDE	EPG
NETFLIX	 / NET TV

[illegible]