



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU / STORE	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
+10	-/--
DISPLAY	
MEM	
RANDOM	
PROGRAM	
VOLUME+	VOL+
VOLUME -	VOL -
CH+	P+
CH -	P -
EDIT	OK
BACK	BACK
TIME	SLEEP
CHANGE DISP	TV/DTV
DIMMER	INFO
GUIDE	EPG
INTRO	FAV
EJECT	 / NET TV
PAUSE	
STOP	 / SMART

[illegible]