



ORIGINAL	SUPERIOR
	POWER
	MUTE
	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
HDMI	/ SOURCE
BONUS VIEW	
AUDIO SYNC	
/ OPTIONS	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ BACK	BACK
SOUND MODE	SLEEP
INFO	INFO
SURROUND	EPG
TOP MENU	FAV
OPEN / CLOSE	/ NET TV

ORIGINAL	SUPERIOR
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
AUDIO SOURCE	SHIFT+1
POP UP MENU / DISC	SHIFT+2
RADIO	SHIFT+3
USB	SHIFT+4
TREBLE	SHIFT+UP
BASS	SHIFT+DOWN
REPEAT	SHIFT+BACK
RED	SHIFT+RED
GREEN	SHIFT+GREEN
YELLOW	SHIFT+YELLOW
BLUE	SHIFT+BLUE

