



ORIGINAL	SUPERIOR
	POWER
	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
REC MODE	-/--
DISPLAY	
TOOLS	
SETUP	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
 / BACK	BACK
TIMER	SLEEP
USB	TV/DTV
EDIT	INFO
SELECT	FAV
OPEN/CLOSE	 / NET TV
STOP	 / SMART

[illegible]