



ORIGINAL	REPLACEMENT
POWER	POWER
MUTE	MUTE
MENU	MENU
INPUT DVD	AV
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
REPEAT A-B	SHIFT+BACK
DISK	-/--
SEATING	
SURROUND	
DIM	
VOICE	
VOL+	VOL+
VOL-	VOL-
CH PRESET+	P+
CH PRESET-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
REPEAT	BACK
SLEEP	SLEEP
INPUT TV	TV/DTV
ZOOM	SHIFT+

ORIGINAL	REPLACEMENT
PROGRAM	EPG
BANDA	FAV
INPUT AUX	SHIFT+1
INPUT VCR	SHIFT+2
INPUT CD	SHIFT+3
INPUT CDR TAPE	SHIFT+4
SYSTEM MENU	SHIFT+MENU
VOL CENTER+	SHIFT+VOL+
VOL CENTER-	SHIFT+VOL-
VOL REAR +	SHIFT+CH+
VOL REAR -	SHIFT+CH-
SUB VOL +	SHIFT+RIGHT
SUB VOL-	SHIFT+LEFT
SCAN+	SHIFT+UP
SCAN-	SHIFT+DOWN
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE
PAUSE	SHIFT+
STOP	SHIFT+

