



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
PRESET NEXT	1
PRESET PREV	2
INPUT CD	/ SOURCE
INPUT FM BLUETOOTH	-/--
DISPLAY	
RDS	
TIME	
VOL+	VOL+
VOL -	VOL -
ALBUM+	P+
ALBUM -	P -
UP	UP
DOWN	DOWN
LEFT / TUNE DOWN	LEFT
RIGHT/ TUNE UP	RIGHT
OK	OK
REPEAT	BACK
SLEEP	SLEEP
INPUT USB AUDIO	TV/DTV
CLOCK	INFO
EFFECT	FAV
PROGRAM	EPG
PLAY	YELLOW

ORIGINAL	SUPERIOR
SKIP NEXT	BLUE
SKIP PREV	GREEN
PAUSE	
STOP	/ SMART
USB POWER	SHIFT+POWER
USB ALBUM+	SHIFT+1
USB ALBUM -	SHIFT+2
USB UP	SHIFT+UP
USB DOWN	SHIFT+DOWN
USB LEFT	SHIFT+LEFT
USB RIGHT	SHIFT+RIGHT
USB PRESET NEXT	SHIFT0 +VOL+
USB PRESET PREV	SHIFT+ VOL -
USB NEXT TRACK	SHIFT+ P+
USB PREV TRACK	SHIFT+ P -
USB REPEAT	SHIFT+BACK
USB SHUFFLE	SHIFT+FAV
USB PLAY	SHIFT+YELLOW
USB PAUSE	SHIFT+
USB STOP	SHIFT+

