



ORIGINAL	SUPERIOR
POWER	POWER
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	 / SOURCE
HDMI	-/--
DISPLAY	
SHOW VIEW	
TEXT	
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
LIVE TV	TV/DTV
INFO	INFO
GUIDE	EPG
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE

ORIGINAL	SUPERIOR
TIMER	SHIFT+POWER
AUDIO	SHIFT+MUTE
HOME	SHIFT+MENU
DVD	SHIFT+1
HDD	SHIFT+2
SUBTITLE	SHIFT+ 
REPLAY	SHIFT+LEFT
SKIP	SHIFT+RIGHT
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
TITLE	SHIFT+INFO
RE. MODE	SHIFT+EPG
SAT REC	SHIFT+FAV
EJECT	SHIFT+ 
PAUSE	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

