



ORIGINAL	SUPERIOR
	POWER
	MUTE
	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AUDIO SOURCE	 / SOURCE
 / OPTIONS	-/--
DISC/POP-UP MENU	
TOP MENU	
 / SOUND SETTINGS	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
 / BACK	BACK
RADIO	TV/DTV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE

[illegible]