



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
SYSTEM MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
EDIT	-/--
DISPLAY	
BASS	
TREBLE	
NIGHT / VOICE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
SURROUND / RETURN	BACK
TIMER	SLEEP
DISC / T/C	TV/DTV
REAR	INFO
LOUDNESS	EPG

ORIGINAL	SUPERIOR
PLAY MODE	FAV
STOP	/ SMART
REC	RED
PLAY / PAUSE	YELLOW
AUDIO SELECT	SHIFT+MUTE
DISC MENU	SHIFT+MENU
CAM 1/2	SHIFT+1
CD	SHIFT+2
CDR / TAPE	SHIFT+3
DVD	SHIFT+4
SAT	SHIFT+5
TUNER	SHIFT+6
TV	SHIFT+7
VCR / GAME	SHIFT+8
SUBWOOFER	SHIFT+
CH+	SHIFT+ P +
CH -	SHIFT+ P -
REC MODE	SHIFT+RED

