



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	REPLACEMENT
STANDBY – ON	POWER
MUTE	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DISC	AV
USB	-/--
DISPLAY / OSD	
ZOOM	
ANGLE / RDS	
SUBTITLE	
VOL+	VOL+
VOL-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
A – B	BACK
TIMER / SLEEP	SLEEP
DSC / DBB	TV/DTV
DIM.	INFO
PROGRAM	EPG

[illegible]