



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
TIMER	EXIT
AUX	1
CD	2
TUNER	3
PRESET PREV	4
PRESET NEXT	5
SHUFFLE	-/--
DISPLAY/CLOCK	
DBB	
DSC	
RDS	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
ALBUM+	UP
ALBUM -	DOWN
TUNE -	LEFT
TUNE+	RIGHT
REPEAT	BACK
SLEEP	SLEEP
PROGRAM	EPG
EJECT	 / NET TV

[illegible]