



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
CH LIST	-/--
DISPLAY	
PIC. MODE	
S. MODE	
TEXT / STEP	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INDEX / PROG	INFO

ORIGINAL	SUPERIOR
SUBPAGE	EPG
TIME SHIFT / TITLE	FAV
ASPECT	/ NET TV
HOLD	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
TIMER / ZOOM	SHIFT+POWER
AUDIO	SHIFT+MUTE
REC. LIST	SHIFT+ -/--
REVEAL / A - B	SHIFT+
SIZE	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

