

ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
 / 	 / SOURCE
 / SMART	
 / SMART	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / PC	OK
	SLEEP
TV	TV/DTV
i+	INFO
 / 	
PAUSE	
STOP	
REC	RED

[illegible]