



ORIGINAL	SUPERIOR
STANDBY	POWER
SYSTEM MENU	MENU
EDIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV/HDD	 / SOURCE
BROWSER/HDD	-/--
DISC MENU	
T/C	
DISC MANAGER	
 / CAM	
SKIP NEXT	P+
SKIP PREV	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
 / RETURN	BACK
 / TIMER	SLEEP
Ψ / TUNER	TV/DTV
INFO	INFO
GUIDE/TV	EPG
SELECT	FAV
PAUSE	

[illegible]