



ORIGINAL	SUPERIOR
DVD	
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
V-OUTPUT	/ AV
VOL -/+	VOL -/+
P -/+	P -/+
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
i+	INFO
PAUSE	
STOP / ▲	
REW	GREEN
PLAY / OPT.	YELLOW
FWD / ▼	BLUE

ORIGINAL	SUPERIOR
VCR	
	SHIFT+POWER
	SHIFT+MUTE
1/2/3/4/5	SHIFT+1/2/3/4/5
6/7/8/9/0	SHIFT+6/7/8/9/0
V-OUTPUT	SHIFT+ / AV
I-II	SHIFT+ -/--
VOL -/+	SHIFT+ VOL-/+
P -/+	SHIFT+ P-/+
	SHIFT+
PAUSE	SHIFT+
STOP / ▲	SHIFT+
REW	SHIFT+GREEN
PLAY / OPT.	SHIFT+YELLOW
FWD / ▼	SHIFT+BLUE

