



| ORIGINAL              | SUPERIOR         |
|-----------------------|------------------|
|                       | <b>POWER</b>     |
|                       | <b>MUTE</b>      |
| <b>TV MENU</b>        | <b>MENU</b>      |
| <b>CANCEL</b>         | <b>EXIT</b>      |
| <b>1/2/3/4/5</b>      | <b>1/2/3/4/5</b> |
| <b>6/7/8/9/0</b>      | <b>6/7/8/9/0</b> |
| / AV                  | / AV             |
| / ACTIVE CONTROL      | <b>-/--</b>      |
| / SMART               |                  |
| /                     |                  |
| <b>OPTIONS</b>        |                  |
|                       |                  |
| <b>VOL+</b>           | <b>VOL+</b>      |
| <b>VOL-</b>           | <b>VOL-</b>      |
| <b>P(age)+</b>        | <b>P+</b>        |
| <b>P(age) -</b>       | <b>P-</b>        |
| <b>UP</b>             | <b>UP</b>        |
| <b>DOWN</b>           | <b>DOWN</b>      |
| <b>LEFT</b>           | <b>LEFT</b>      |
| <b>RIGHT</b>          | <b>RIGHT</b>     |
| <b>OK</b>             | <b>OK</b>        |
| <b>BACK / P&lt;P</b>  | <b>BACK</b>      |
|                       | <b>SLEEP</b>     |
| <b>TV/RADIO / DVB</b> | <b>TV/DTV</b>    |
| <b>i+</b>             | <b>INFO</b>      |

| ORIGINAL                    | SUPERIOR            |
|-----------------------------|---------------------|
| / PHOTO VIEWER              | <b>EPG</b>          |
|                             | <b>FAV</b>          |
| <b>RED</b>                  | <b>RED</b>          |
| <b>GREEN</b>                | <b>GREEN</b>        |
| <b>YELLOW</b>               | <b>YELLOW</b>       |
| <b>BLUE</b>                 | <b>BLUE</b>         |
| / I/II                      | <b>SHIFT+MUTE</b>   |
| <b>DIG. TV MENU / PHOTO</b> | <b>SHIFT+MENU</b>   |
| / SMART                     | <b>SHIFT+</b>       |
| <b>A / D</b>                | <b>SHIFT+</b>       |
|                             | <b>SHIFT+</b>       |
|                             | <b>SHIFT+</b>       |
| <b>SKIP NEXT</b>            | <b>SHIFT+ P+</b>    |
| <b>SKIP PREV.</b>           | <b>SHIFT+ P-</b>    |
| <b>PAUSE</b>                | <b>SHIFT+</b>       |
| <b>STOP</b>                 | <b>SHIFT+</b>       |
| <b>REC</b>                  | <b>SHIFT+RED</b>    |
| <b>PLAY</b>                 | <b>SHIFT+YELLOW</b> |
|                             |                     |
|                             |                     |
|                             |                     |
|                             |                     |
|                             |                     |
|                             |                     |
|                             |                     |
|                             |                     |

