



ORIGINAL	SUPERIOR
	POWER
	MUTE
PP	MENU
X	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	/ SOURCE
-/--	-/--
VOL+	VOL+
VOL -	VOL -
	UP
	DOWN
	LEFT
	RIGHT
	EPG
	GREEN
?	BLUE

ORIGINAL	SUPERIOR
VCR	
	SHIFT+POWER
PP	SHIFT+MENU
1/2/3/4/5	SHIFT+1/2/3/4/5
6/7/8/9/0	SHIFT+6/7/8/9/0
PAUSE	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

