



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
INPUT VGA	-/--
AMBILIGHT	
AMBI MODE	
ASPECT	
TXT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
CLOCK	SLEEP
INPUT TV	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
DUAL SCREEN	FAV
UP	SHIFT+UP
DOWN	SHIFT+DOWN
LEFT	SHIFT+LEFT
RIGHT	SHIFT+RIGHT
EXT 1	SHIFT+1
EXT 2	SHIFT+2
EXT 3	SHIFT+3
HDMI 1	SHIFT+4
HDMI 2	SHIFT+5
HDMI 3	SHIFT+6
HDMI SIDE	SHIFT+7
INPUT SIDE	SHIFT+8
SUBTITLE	SHIFT+ 
DEMO	SHIFT+FAV

