



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
MUTE	MUTE
MENU	MENU
STATUS / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SYSTEM	
VOL+	VOL+
VOL-	VOL-
PROG.+	P+
PROG.-	P-
CLEAR	BACK
SLOW	SLEEP
INDEX	INFO
AUDIO	FAV
⏮ / STILL	
STOP	
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE

ORIGINAL	SUPERIOR
TV	
STANDBY / ON	SHIFT+POWER
MUTE	SHIFT+MUTE
MENU	SHIFT+MENU
STATUS / EXIT	SHIFT+EXIT
1/2/3/4/5	SHIFT+1/2/3/4/5
6/7/8/9/0	SHIFT+6/7/8/9/0
VOL+	SHIFT+ VOL+
VOL-	SHIFT+ VOL-
P+	SHIFT+ P+
P-	SHIFT+ P-
UP	SHIFT+UP
DOWN	SHIFT+DOWN
LEFT	SHITF+LEFT
RIGHT	SHIFT+RIGHT

